










MOTION PRO, INC.
3171 Swetzer Road
Loomis, CA 95650
Tel 650.594.9600 Fax 650.594.9610
www.motionpro.com

INSTRUCTIONS

MOTION PRO Shock Spring Compressor P/N 08-0608

WARNING: Removing and installing the spring on a coilover shock is a very dangerous procedure and improper use of this tool could result in great bodily injury or death. This tool should only be used by a qualified mechanic that has expertise and training in servicing coilover shock absorbers. Great care should be taken to ensure that the spring and retainers are properly installed. Failure to do so can cause great bodily injury or death. Refer to the factory service manual for your vehicle or shock absorber for further information on spring and shock removal.

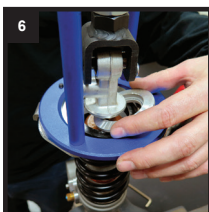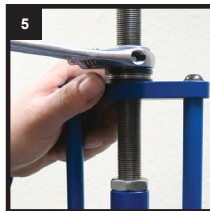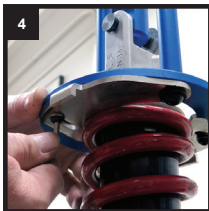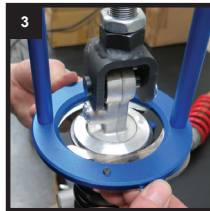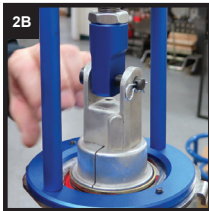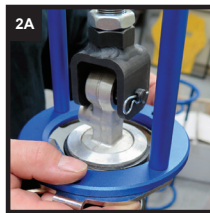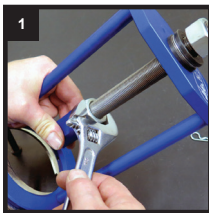

1. Attach either the clevis or eyelet adapter and secure it to the threaded pull rod with the lock nut.
2. Place the Motion Pro spring compression tool over the shock and install the 10 mm pin and clip.
3. Slide the adjuster plates in against the shock spring.
4. Lock them in place using the 6 mm screws.
5. Tighten the nut as shown in the photo to compress the spring using a 30 mm wrench or adjustable end wrench.
6. Continue to compress the spring until the retaining ring or clip can be removed as shown.
7. The spring can be removed from the shock.

To reinstall the spring simply reverse this process.

