




Motion Pro, Inc.  
867 American Street  
Tel 650.594.9600  
Fax 650.594.9610  
www.motionpro.com

# INSTRUCTIONS

## MOTION PRO HELMET LOCKS P/N 11-0087 & PN 11-0088



1. Tools needed to install the helmet lock.

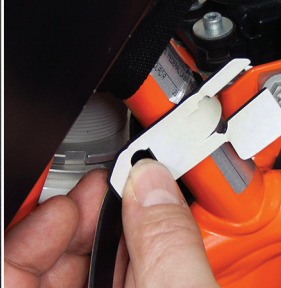

2. Place the rubber protector around the tube to determine the correct length required.



3. Trim the end of the rubber protector to the correct length with scissors.



4. Remove the paper backing and attach the rubber protector to the back of the helmet lock.




5. Install the hose clamp as shown in the photo.



6. Attach the rubber protector to the underside of the hose clamp.



7. Place in desired location holding the top of clamp in place and pushing the open end of the clamp into the threaded end. Tighten the hose clamp using a #2 straight slot screw driver.

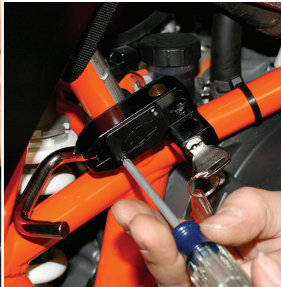

8. Attach the plastic cover using the two small Phillips screws.



Installation is complete.

**NOTE:** If your desired location requires a larger clamp the helmet lock will accept standard 1/2 in (12.7 mm) hose clamps.