



Motion Pro, Inc.  
867 American Street  
San Carlos, CA 94070  
Tel 650.594.9600 Fax 650.594.9610  
www.motionpro.com

# INSTRUCTIONS

## MOTION PRO HOT START KIT P/N 01-0703

1. Remove seat and tank.
2. Remove 8mm bolt holding stock hot start unit to frame [directly under intake boot see photo #1].
3. Next, remove the stock plunger assembly from hot start body using a 14mm wrench.
4. Now install new plunger assembly to cable in order as pictured in photo #2.
5. Next, install hot start plunger and cable to hot start body [see photo #3].
6. Re-install stock hot start body to frame with cable installed, routing the cable up the left side of frame.
7. Mount the supplied bracket to handlebar mount [see photo #4].
8. Adjust cable so plunger will open fully.

Photo 1

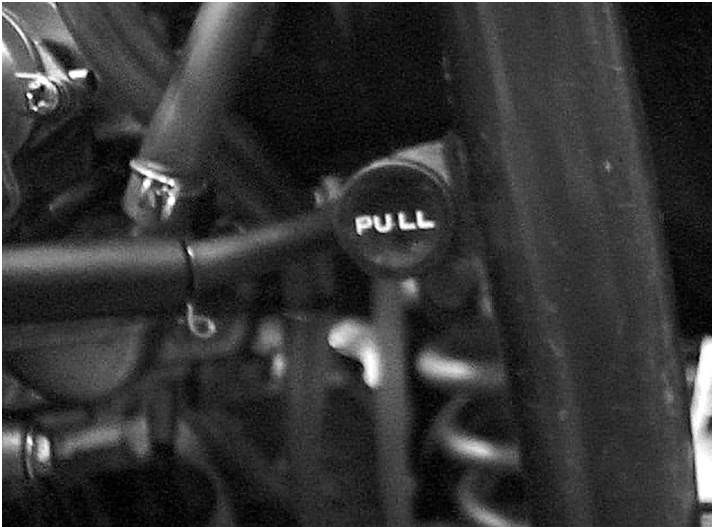


Photo 2

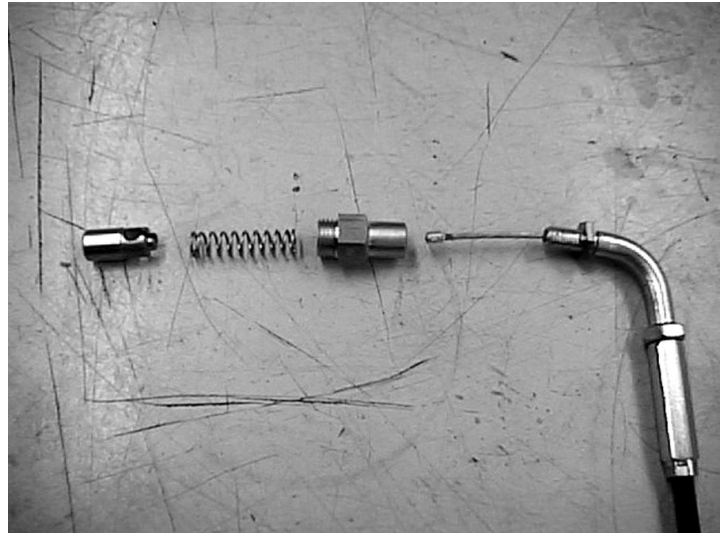


Photo 3



Photo 4

